


How to Replace Springs

1. Pull down the grip to expose the spring.

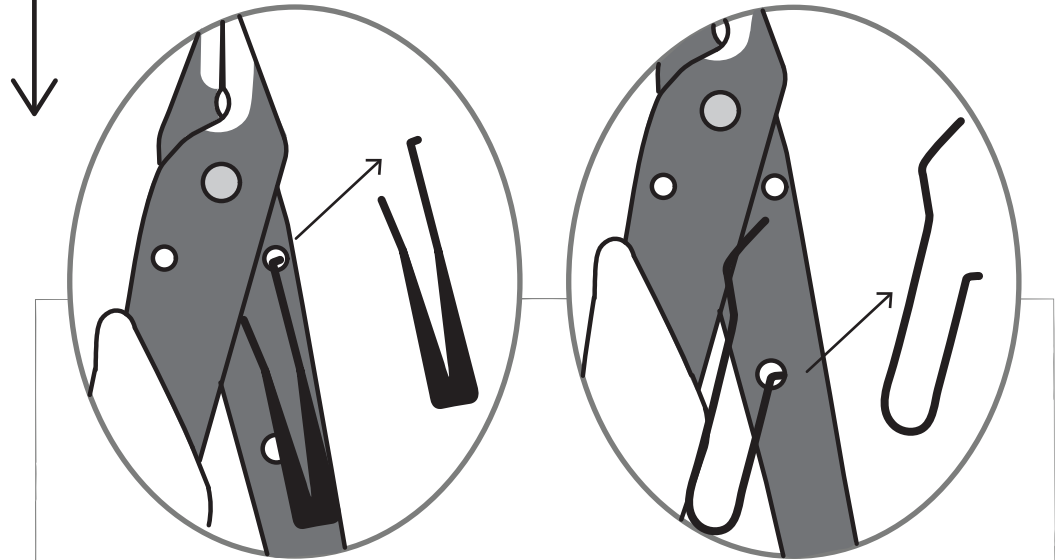

The spring style can vary between models. All styles have a tiny foot that hooks into one of the holes in the tool's handle.

2. Remove the old broken spring and replace it with a new spring.

3. Slide the grip up to hold the spring in place.